

**XK/XJ SERIES  
DRIVERS  
HANDBOOK  
SUPPLEMENT  
JJM 18 02 18/001**

### **HomeLink® universal transceiver**

The HomeLink universal transceiver is fitted in the roof console. HomeLink can be programmed to transmit the radio frequencies of up to four (three for the sports vehicle) different transmitters used to activate garage doors, gates, home lighting, security systems, or other radio frequency operated devices.

For further information or if you require assistance please contact your Jaguar Dealer or

HomeLink

telephone: 1-800-355-3515 or on the internet at [www.HomeLink.jci.com](http://www.HomeLink.jci.com).

### **Compatible accessories**


If you would like additional information on the HomeLink universal transceiver, compatible products or to purchase other accessories such as the HomeLink lighting package, contact your Jaguar Dealer or

HomeLink call 1-800-355-3515 or on the internet at [www.homelink.jci.com](http://www.homelink.jci.com).




### **WARNING:**

1. Do not use the HomeLink universal transceiver with any garage door opener that lacks the safety stop and reverse feature as required by federal safety standards. (This includes any garage door opener model manufactured before April 1, 1982). A garage door opener which cannot detect an object, signalling the door to stop and reverse, does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death.
2. When programming the HomeLink universal transceiver to a garage door opener or entry gate, make sure that people, the vehicle and objects are out of the way to prevent potential harm or damage as the gate or garage door will activate during the programme.

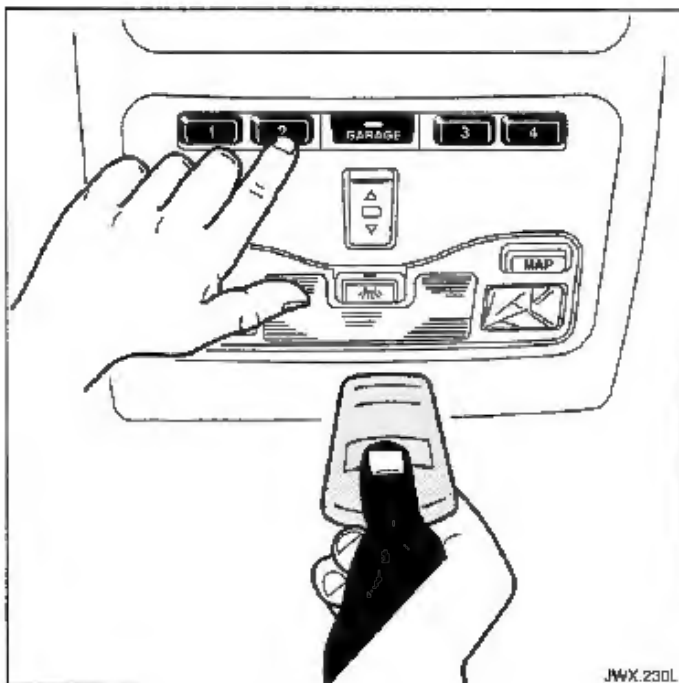

Sedan Transceiver

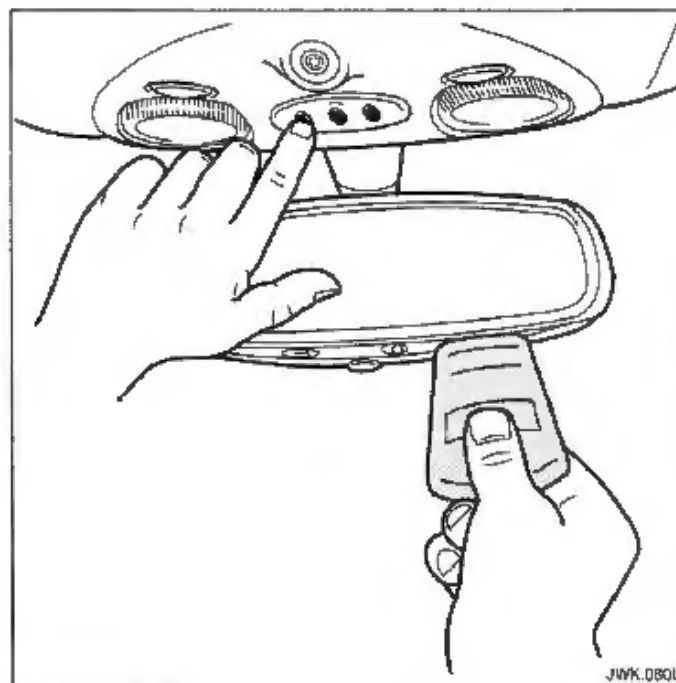

Sports Transceiver

**Programming**

1. Switch off the engine.
2. Press and hold the two outermost buttons, releasing when the indicator light begins to flash (after 20 seconds). Do not repeat this step when programming the remaining buttons.
3. Hold the end of the hand-held transmitter of the device you wish to train approximately one to three inches away from the chosen HomeLink button, keeping the indicator light in view.
4. Using both hands, simultaneously push the hand-held transmitter button and the chosen HomeLink button. Do not release the buttons until step 5 has been completed.

**Note:** Some entry gates and garage door openers may require you to replace step 4 with the procedures shown in the "Canadian Programming" section on the following pages.

5. The HomeLink indicator light will flash, first slowly and then rapidly. When the indicator light flashes rapidly, release both buttons. The rapid flashing light indicates successful programming of the frequency signal.

If you are programming a rolling code equipped device, continue with the procedures outlined in "Rolling code programming".

To programme the remaining buttons, follow steps 3 through 5. Your device should now operate by pressing and releasing the programmed HomeLink button. If the device does not operate you may need to complete the steps outlined in "Rolling code programming" or call 1-800-355-3515 for assistance.

**Rolling code programming**

Rolling code garage door openers (or other rolling code devices) which are "code protected" may be determined by the following:

- reference the device owner's instruction manual for verification.
- the hand-held transmitter appears to programme the HomeLink universal transceiver but does not activate the garage door.
- press and hold the trained HomeLink button. The device has the rolling code feature if the HomeLink indicator light flashes rapidly and then turns solid after two seconds.

To train a garage door opener or other device with the rolling code feature, follow these steps after completing the Programming section instructions on the previous page.

**Note:** The aid of a second person may make the following training procedures quicker and easier.

1. Locate the "learn" or "smart" button on the garage door opener motor head unit. Exact name, location and colour of the button may vary by garage door opener brand. If there is difficulty locating this button, reference the garage door opener instruction manual or contact HomeLink.
2. Firmly press and release the "learn button" on the garage door opener motor head unit.

**Note:** Following step 2 there are 30 seconds in which to initiate step 3.

3. Firmly press and release the HomeLink button. Press and release the HomeLink button a second time to complete the training process. Some garage door openers may require you to do this step a third time to complete the training.

The device should now recognise the HomeLink signal and activate when the HomeLink button is pressed. The remaining buttons may now be programmed if this has not been previously done.

#### **Canadian programming**

Canadian frequency laws and the technology of some entry gates require you to cycle (press and re-press the hand-held transmitter button every two seconds) during programming.

Continue to press and hold the desired HomeLink button (note steps 3 through 5 in the programming section) while you cycle your hand-held transmitter until the frequency signal has been learned. The indicator light will flash slowly and then rapidly upon successful training.

**Note:** If programming a garage door opener or entry gate, it is advised to unplug the device during the cycle process to prevent possible motor burn-up.

To operate simply press the programmed HomeLink button. Activation will now occur for the trained product (garage door, security system, entry door lock, estate gate or home or office lighting). For convenience, the hand-held transmitter for the device may be used at any time.

#### **Erasing programmed HomeLink buttons.**

Individual buttons cannot be erased, however, to erase all three programmed buttons:

1. Press and hold the two outermost buttons until the indicator light begins to flash after 20 seconds.
2. Release both buttons.

The HomeLink universal transceiver is now in the train, or learning, mode and can be programmed at any time following steps 3 to 5 in the "Programming" section.

---

**Reprogramming a HomeLink button**

To programme a device to HomeLink using a button previously trained, follow these steps;

1. Press and hold the desired HomeLink button. Do not release until step 4 has been completed.
2. When the indicator light begins to flash slowly (after 20 seconds), position the hand-held transmitter 1 to 3 inches away from the HomeLink surface.
3. Press and hold the hand-held transmitter button.
4. The HomeLink indicator light will flash, first slowly and then rapidly. When the indicator light begins to flash rapidly, release both buttons.

The previous device has now been erased and the new device can be activated by pushing the HomeLink button that has just been programmed. This procedure will not affect any other programmed HomeLink buttons.

**WARNING:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

